# 

## 01 Disclaimer



Thank you for purchasing this HOBBYWING product! The power of brushless power system is powerful. Any improper use may cause personal injury and damage to the product and related devices. We rongly recommend reading through this user manual before use and strictly abide by the specified operating procedures. We shall not be liable for any liability arising from the use of this product, including but not limited to reimbursement for incidental or indirect losses. Meanwhile, we do not assume any responsibility caused by unauthorized modification of the product. We have the right to change the product design, appearance, performance and use requirements without notice

### 02 Warnings

Please make sure that all wires and parts is insulated before connecting the ESC, because short circuit will damage the ESC
 Please connect all parts properly. Poor connection will damage the device and you would not control the vehicle normally.

Xerun

KERUN XR8 Pro G2

- Please check power devices and instructions to ensure the matching of power is reasonable.
  Please use 60W of welding devices to weld input/output wire and the plug of the ESC to ensure reliable welding.
  Please do not run at full speed if the tire left the ground, otherwise the tire will burst and cause injury.
- The external temperature of the ESC cannot exceed 90 C/194 F. High temperature will destroy the ESC and the motor. Open the overheat protection function of the ESC. Please remember to disconnect the battery and the ESC. If not, the ESC will consume electric energy and the battery will be completely discharged which will lead to the failure of battery or ESC. We are not responsible for any damage caused by this!


## **03** Features

- Built-in 5 common profiles, suitable for all 1/8 Racing, select and use instantly. (e.g. Zero timing-Blinky mode, 1/8 Off-Road Racing, 1/8 On-Road Racing, 1/8 GT Racing, 1/8 Sport mode • There are 29 built-in adjustable parameters to set various power requirements. The parameters can be imported and exported, which is convenient for c cate with and learn from each other.
- Support the firmware upgrade of the ESC (The multi-function LCD programming box G2 or OTA Programmer is needed to purchase). You can enjoy the latest functions.
- Support 48 degrees Boost and Turbo timing. When matching with XERUN 4268/4274 G3 motor, the Max. Speed can be promoted by 50%, easily win your rival.
  Multiple function: Low voltage protection, thermal protection of the ESC, motor and capacitor.
  Built-in switch mode BEC with a maximum output of 15A and voltage adjustable from 6V to 8.4V (step: 0.1V) for usage with servos & other devices require different voltages.
- The built-in reverse connection protection circuit of the ESC avoid the damage to the ESC due to reverse connection.
  The record function of off-line data can read the Max. Temperature and RPM of the ESC and motor by Multifunction LCD Program Box (G2) or HW Link (OTA Programmer is needed to
- purchase), which is convenient for driver to analyze the running of the power system • The record function of real-time data: Open this function by connecting the ESC with HW Link (OTA Programmer is needed to purchase) and mobile App can check throttle quantity, Voltage, Current, Temperature, RPM and other data in real time, and obtain the running status of the ESC and motor.

## **04** Specifications

Mode	XERUN XR8 Pro G2
Cont./Peak Current	200A/1080A
Motor Type	Sensored / Sensorless Brushless Motors
Applications	1/8 On-Road/Off-Road/Truggy Racing
Motor Limit	Brushless Motor Limit with 4S LiPo/12S NiMH: 4268/4274 Size Motor, $KV \leq 3000$ ;
LiPo/NiMH Cells	6-12 Cells NiMH,2-4S LiPo
BEC Output	6-8.4V Adjustable, Continuous/Peak Current: 6A/15A( Switch-mode)
Cooling Fan	Powered by the stable BEC voltage of 6-8.4V
Size/Weight	56.1(L)*42.1(W)*38.6(H)mm/ 114g(w/ wires )
Connectors	Input End: No Connectors; Output End: No Connectors
Programming Port	Multifunction LCD Program Box G2,OTA Programmer

## **05** Connections

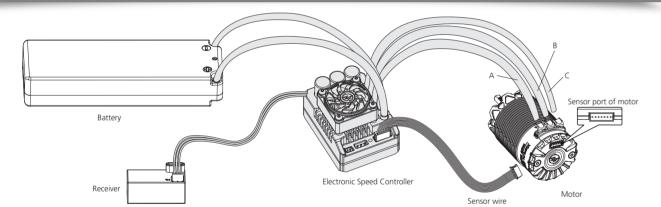

Please connect the wire correctly according to the instructions and drawing:

1. Motor Wiring: There is difference between connection of sensored brushless motor and sensorless brushless motor. Please according to the following wiring method

A. Connect sensored brushless motor: There is strict wiring order from the ESC to the motor, the three A/B/C ESC wires must connect to the three A/B/C motor wires correspondingly. Next, connect the ESC sensor port and the notor sensor port with the stock 6-pin sensor cable. If you don't plug the sensor cable in, your ESC will still work in sensorless mode even if you're using a sensored mo Note: If the forward and backward is reverse after installing the motor, please modify "no. 11" parameters "Motor Rotation" to change the direction. B. Sensorless Motor Wiring:

- Users do not need to be worried in r egards to the connectivity with the A/B/C(ESC and motor) as ther e is no polarity. You may find it necessary to swap two wir es if the motor runs in reverse. 2. Receiver Wiring: Insert the throttle control flat cable of ESC into the throttle channel (i.e. THROTTLE channel) of the receiver. Since the red line in the flat cable outputs 6-8.4v voltage to the receiver and
- ring servo. Please do not supply additional power to the receiver, otherwise the electric adjustment may be damaged.
- 3. Battery Wiring: Please make sure that the (+) pole of the ESC is connected to the (+) of the battery, and the (-) pole is connected to the (-). If connect reversely, the ESC cannot start up. (Add the picture of connecting battery here.)

### 06 ESC Setup

This is an extremely powerful system. For your safety and the safety of those around you, we strongly recommend removing the pinion gear attached to the motor before

Set the throttle range When first use the ESC or the transmitter changes "TRIM" tune, D/R,EPA and other parameters, the throttle range is need to reset. We strongly recommend to open the fail safe function o the transmitter, set the no signal protection of throttle channel("F/S") to close the output or set the protection value to the throttle neutral position. Thus the motor can stop running if the ceiver cannot receive the signal of the transmitter. The calibrating steps of throttle is as follow 1. Turn on the transmitter, ensure all parameters (D/R, EPA, ATL) on the throttle channel are at default (100%). For transmitter without LCD, please turn the knob to the maximum, and the ON/OFF butto throttle "TRIM" to 0. (If the transmitter without LCD, turn the knob to the middle point). Start by turning on the transmitter with the ESC turned off but connected to a battery. Holdin the "SET" button then press the "ON/OFF" button, the RED LED on the ESC starts to flash (The motor beeps at the same time), and then release the "SET" button immediatel Note : Beeps from the motor may be low sometimes, and you can check the LED status instead Set the neutral point, the full throttle endpoint and the full brake endpoin Leave transmitter at the neutral position, press the "SET" button, the RED LED dies out and the GREEN LED flashes 1 time and the motor beeps 1 time to accept the neutral position
 Pull the throttle trigger to the full throttle position, press the "SET" button, the GREEN LED blinks 2 times and the motor beeps 2 times to accept the full throttle endpoint. • Push the throttle trigger to the full brake position, press the "SET" button, the GREEN LED blinks 3 times and the motor beeps 3 times to accept the full brake endpoint • The end position of forward: Pull the trigger to the maximum throttle position if it is pistol-style transmitter. Push the throttle to the top if it is board-style transmitter. • The end position of backward: Push the trigger to the maximum brake position if it is pistol-style transmitter. Pull the throttle to the bottom if it is board-style transmitter The motor can be started 3 seconds after the ESC/Radio calibration is complete 2 Power on/off and Beep illustration 1) Illustration of power on/off: Short press the ON/OFF key to turn on the ESC in the off state, and long press the ON/OFF key to turn off the ESC 2) Beep illustration when turn on the ESC: When turn on ESC under normal conditions (i.e. it is started without pressing the SET key), the motor will emit several Beeps to indicate the LiPo cells For example, "Beep, Beep, Beep" means 3S, "Beep, Beep, Beep, Beep" means 4S.

Progammable Items											
Туре	ID	Item									
General Setting	1A	Running Mode	ł	For/Bi	rake		I	For/Rev/	Brake		
	1B	Reverse Force	25%			50%					
	1C	LiPo Cells	Auto Calculate				2 Ce	lls			
	1D	Cutoff Voltage	Disabled		Auto (3.3V/Cell)						
	1E	ESC Thermal Protection	Disabled			Enabled					
	1F	Motor Thermal Protection	Disabled			Enabled					
	1G	BEC Voltage									6.
	1H	Sensor Mode	Full Sensored		Sensored/Sensorless Hybrid			brid			
	11	Motor Rotation	CCW		CW						
	1J	Phase-AC Swap	Disabled		Enabled						
	2A	Throttle Rate Control									
	2B	Throttle Curve	Linear		Customized						
trol	2C	Neutral Range	6%		8%						
Cont	2D	Initial Throttle Force									
Throttle Control	2E	Coast									
Thre	2F	PWM Drive Frequency	2K		ЗK		4K	8K		12K	
	2G	Softening Value									
	2H	Softening Range	0%	1	0%	20%	6 25	%	30%	35	%
	ЗA	Drag Brake									0
0	ЗB	Max. Brake Force									0
Brake Control	3C	Initial Brake Force	=	Drag	Brake						0
	3D	Brake Rate Control									
	ЗE	Brake Curve	Linear		Customized						
	ЗF	Brake Frequency	0.5K		1K		2K	4K		8K	
	4A	Boost Timing									
	5A	Turbo Timing									
Timing	5B	Turbo Delay	Instant	0.0	5s 0	.1s	0.15s	0.2s	0.25	s O	).35
F	5C	Turbo Increase Rate (deg/0.1sec)	Instant	t	3deg/0	.1s	6deg/0.1	s 9de	g/0.1s	12de	eg/(
	ED	Turke Degraade Pate (deg/0,1cec)	Instant		2400/0	10	Edag 10 1	c 0-1-	0.10	12-1	

#### 1A: Running Mode

Option 1: Forward with Brake Racing mode. It has only forward and brake functions.

Option 2: Forward/ Reverse with Brake This option is known to be the "training" mode with "Forwar d/ Reverse with Brake" functions. Hobbywing has adopted the "DO UBLE-CLICK" method, that is your vehicle only brakes on the 1st time you push the thr ottle trigger forward (brake) (1st push). The motor stops when you quickly release the throttle trigger and then r e-push the trigger quickly (2nd push), only then the vehicle will reverse. The reverse function will not work if your car does not come to a complete stop. The vehicle only reverses after the motor stops. This method is for preventing vehicle from

- Option 3: Forward and Reverse is mode is often used by special vehicles. It adopts the "SINGLE-CLICK" method. The vehicle will reverse immediately when you push the thr ottle triager forward (brake).
- 1B: Max. Reverse Force: The reverse force of the value will determine its speed. For the safety of your vehicle, we recommend using a low amount. 1C: Lipo Cells:
- We strongly recommend that you set LiPo cells manually not automatically. When set automatically, the ESC can judge as 25 or 45. If the battery voltage is lower than 9.5V after power on the ESC, it will be judged as 2S; if the battery voltage is between 9.5V ~ 13.6V, it will be judged as 35; if higher than 13.6V, it will be judged as 45. 1D: Cutoff Voltage:
- The ESC will monitor the battery voltage all the time, once the voltage is lower than the threshold value, the ESC will reduce the power to 50% instantly and cutoff the power output in 40 seconds. When enters into voltage protection, the RED LED will single flash that repeats  $(\dot{x}, \dot{x}, \dot{x}, \dot{x}, \dot{x}, \dots)$ . Please set the "Cutoff Voltage" to "Disabled" or customized protection threshold value if you are using NiMH batteries.
- to "Disabled" (But the battery would be damaged due to overcharged)
- Option 2: Auto The ESC calculates the corresponding cutoff voltage as per the number of LiPo cells it detects and the "3.3V/cell" rule. For example, if the ESC detects a 4S, the cutoff voltage protection threshold value is 3.5x4=14.0V.
- Option 3: Customized The customized cutoff threshold is a voltage for the whole battery pack (adjustable from 5.0V to 13.6V). Please calculate the value as per the number of LiPo cells you are using. For example, hen you use a 4S and you want the cutoff voltage for each cell is 3.0V, you will need to set this item to 12V (3.0\*4) 1E: ESC Thermal Prot
- The output from the ESC will be cut off with the value you have preset. The GREEN LED flashes (🔄, 🚖, 🖄) when the ESC temperature reaches to the preset value. The output will not resume until the ESC temperature gets do
- Warning! Please do not disable this function unless you're in a competition. Otherwise the high temperature may damage your ESC and even your motor. 1F: Motor Thermal Protection: The GREEN LED flashes (会会,会会,会会) when the motor temperature reaches to the preset value. The output will not resume until the motor temperature gets down. Warning! Please do not disable this function unless you're in a competition. Otherwise the high temperature may damage your motor and even your ESC. For non-Hobbywing motor, the ESC may get this protection activated too early/late because of the different temperature sensor inside the motor. In this case, please disable this function and monitor the motor temperature manually.
- 1G: BEC Voltage:
- BEC voltage can be adjusted between 6.0-8.4V. 6.0V is applicable to common servo. If use high-voltage servo, set to higher voltage according to voltage marking of servo. Warning: The setting BEC voltage should not be higher than the max. voltage of common servo, otherwise it will damage the servo or ESC 1H: Sensor Mode

#### **Option 1: Full Sensored**

- If use XERUN 4268/74-G2/G3 motor, it can set to full sensor mode. The power system will work in the "sensored" mode at all times. The efficiency and drivability of this mode is at the highest And Boost, Turbo timing can be used and get erupting power. Option 2: Sensored/Sensorless Hybrid
- This is universal driving mode of current 1:8 power system. The ESC operates the motor in sensored mode during the low-speed start-up process, followed by switching to operating the motor in ne "sensorless" mode when the RPM is increase
- 11: Motor Rotation: With the motor shaft faces you (the rear end of the motor is away from you), increase the throttle input, the motor (shaft) will rotate in the CCW/CW direction if the "Motor Rotation/Direction" set to "CCW/CW". Generally, the vehicle runs forward when the motor (shaft) rotates in the CCW direction. However, some vehicles only run forward when the motor rotates in the CW direction due to the different chassis design. In that case, you only need to set the "Motor Rotation/Direction" to "CW.
- 1J: Phase-AC Swap: If the A/C wire of ESC connect to A/C wire of motor with crossed way (A wire of ESC connects to C wire of motor, C wire of ESC connects to A wire), set this item as Enable. Warning! When #A/#B/#C wire of ESC connect to #A/#B/#C wire of motor correspondingly, do not Set to Enable. Otherwise it will damage the ESC and motor.
- 2A: Throttle Rate Control:
- This item is used to control the throttle response. It can be adjustable from 1 to 30 (step: 1), the lower the throttle rate, the more the limit will be on the throttle response. A suitable rate can help driver to control his vehicle properly during the starting-up process. Generally, you can set it to a high value to have a quick throttle response if you are proficient at throttle control. 2B: Throttle Curve:
- The throttle curve parameter reconciles the position of the throttle trigger (in throttle zone) and the actual ESC throttle output. It is linear by default and we can change it to non-linear via adjusting the throttle curve. For example, if adjust it to +EXP, the throttle output at the early stage will be higher (than the output when the curve is linear); if it is adjusted to -EXP, the throttle output at the early stage will be lower (than the output when the curve is linear.
- 2C: Neutral Range: As not all transmitters have the same stability at "neutral position", please adjust this parameter as per your preference. You can adjust to a bigger value when this happens. 2D: Initial Throttle Force:
- It also called as minimum throttle force. You can set it according to wheel tire and traction. If the ground is slippery, please set a small throttle force. 2E: Coast:
- value, the more the "COAST" will be felt. Example, COAST of 0 deactivates, and a COAST of 20% would be the maximum amount of COAST. When a vehicle has a larger final drive ratio, the tendency of having a "drag" feel is higher. The "COAST" technology is to allow the car to roll (coast) even when the final drive ratio is high. The ers will refer to this to the tr
- Note : The "Coast" will be void (even if you set it to any value besides 0) if the above "drag brake" is not "0%". 2F: PWM Drive Frequency: The acceleration will be more aggressive at the initial stage when the drive frequency is low; a higher drive frequency is smoother but this will create more heat to the ESC. If set this item to "Customized", then the PWM frequency can be adjusted to a variable value (which ranges from 2K to 32K) at any 0-100% throttle input, Please choose the frequencies as per the actual test
- results of your vehicles.
- end. In Modified class, drivers often feel the power of the bottom end is too aggressive. Little throttle input usually brings too much power to the car and make it hard to control at the corners, HOBBYWING creates this softening function to solve the issue 2H: Softening Range:
- 3A: Drag Brake Force:
- 3B: Max. Brake Force:
- 3C: Initial Brake Force:
- the drag brake 3D: Brake Rate Control:
- 3E: Brake Curve:
- 3F: Brake Frequency:
- The brack force will be larger if the frequency is low; you will get a smoother brake force when the value is higher. If set this item to "Customized", then the brake frequency can be adjusted to a variable value (which ranges from 0K to 16K) at any 0-100% throttle input, please choose the frequencies as per the actual test results of your vehicles. 4A: Boost Timing:
- It is effective within the whole throttle range; it directly affects the car speed on straightaway and winding course. The ESC adjusts the timing dynamically as per the throttle amount in the peration. The Boost Timing is not constant but variable
- This item is adjustable from 0 degree to 48 degrees, the corresponding turbo timing (you set) will initiate at full throttle. It's usually activated on long straightaway and makes the motor unleash
- 5B: Turbo Delav

- The RPM of the motor will be lowered aradually when throttle is reduced. The vehicle will not reduce speed abruptly when the throttle is reduced to return to the neutral position. The bigger the
- 2G: Softening Value: It allows users to fine-tune the bottom end, change the driving feel, and maximize the driving efficiency at different track conditions. The higher the "Softening Value ", the milder the bottom
- It's the range to which "Softening Value" starts and ends. For example, 0% to 30% will be generated when the user pre-programs the "Softening Range" at a value of 30%.
- it sthe braking power produced when releasing from full speed to neutral position. This is to simulate the slight braking effect of a neutral brushed motor while coasting.
- is ESC provides proportional braking function; the braking effect is decided by the position of the throttle trigger. It sets the percentage of available braking power when full brake is applied. arge amount will shorten the braking time but it may damage your pinion and spur.
- It is also known as "minimum brake force". It is the force when pushing throttle trigger from neutral zone to the initial brake position. To get a smoother braking effect, the default is equal to
- It's adjustable from 1 to 20 (step: 1), the lower the brake rate, the more limit on the brake response. A suitable rate can aid the driver to brake his vehicle correctly. Generally, you can set it to a high value to have a quick brake response.

- 5A: Turbo Timina:
- naximum potential.
- When "TURBO DELAY" is set to "INSTANT", the Turbo Timing will be activated right after the throttle trigger is moved to the full throttle position. When other value(s) is applied, you will need

### For/Rev 75% 100% 3 Cells 4 Cells 5.0-13.6V (Adjust Step 0.1V)

6.0-8.4V (Adjust Step 0.1V) 1-30 (Adjust Step 1) 10% 1-15 (Adjust Step 1 0-15 (Adjust Step 1) 16K 24K 0-30° (Adjust Step 1°) 40% 45% 55% 60% 65% 70% 75% 0%-100%(Adjust Step 1%) 0%-100%(Adjust Step 1%) 0%-50%(Adjust Step 1%) 1-20 (Adjust Step 1) 16K Customized 0-48° (Adjust Step 1°) 0-48° (Adjust Step 1°)

5s 0.4s 0.45s 0.5s 0.6s 0.7s 0.8s 0.9s 1.0s g/0.1s 15deg/0.1s 18deg/0.1s 21deg/0.1s 24deg/0.1s 27deg/0.1s 30deg/0.1s 5D Turbo Decrease Rate (deg/0.1sec) Instant 3deg/0.1s 6deg/0.1s 9deg/0.1s 12deg/0.1s 12deg/0.1s 13deg/0.1s 12deg/0.1s 21deg/0.1s 21deg/0.1s 24deg/0.1s 27deg/0.1s 30deg/0.1s

Option 1: Disabled The ESC does not cut the power off due to low voltage. We do not recommend using this option when you use any LiPo battery as you will irreversibly damage the product. It is suggested to set

This item is used for regulating the relation between the throttle range in brake zone and the brake force. The default setting is linear. You can change it to non-linear via a LCD program box and a PC (HOBBYWING USB LINK software needs to be installed on the PC.) for different braking effect.

to hold the throttle trigger at the full throttle position (as you set) till the Turbo Timing initiates. 5C: Turbo Increase Rate (deg/0.1sec):

This item is used to define the "speed" at which Turbo Timing is released when the trigger condition is met. For example, "6 degs/0.1sec" refers to the Turbo Timing of 6 degrees that will be released in 0.1 second. Both the acceleration and heat is higher when the "Turbo increase rate" is of a larger value 5D: Turbo Decrease Rate (deg/0.1sec):

After the Turbo Timing is activated and the trigger condition turns to not be met (i.e. vehicle slows down at the end of the straightaway and gets into a corner, full throttle turns to partial throttle, the trigger condition for Turbo Timing turns to be not met), if you disable all the Turbo Timing in a moment, an obvious slow-down like braking will be felt and cause the control of vehicle become bad. If the ESC can disable the Turbo Timing at some "speed", the slow-down will be linear and the control will be improved. Warning! Boost Timing & Turbo Timing can effectively improve the motor efficiency; they are usually used in competitions. Please take some time to read this manual and then set these two integrates are fully, monitor the ESC & motor temperatures when you have a trial run and then adjust the Timing and FDR accordingly as aggressive Timings and FDR may cause your ESC or motor to be burnt. Note: Parameters 5A-5D only has function when you set the "Drive Mode" to "Full Sensored"

4 Preset modes

In order to make one firmware applicable to all different racing conditions, there are 5 groups of preset modes in the ESC. Users are able to change the settings of the modes provided and natch suitable gear ratio. Plug-and -screw. Users can change the settings as per the control feel, track, and rename the setting mode. For example, the name can be changed from "1/8 Off-Road" to "NC2020-1900" to indicate the NC2020 uses 1900KV. This can be saved for future reference as well.

Preset Modes for Different Racing:						
Mode #	Modes/Profiles	Applications				
1	Zero Timing	Applicable for various STOCK Racing that the ESC must use Zero Timing (Blinky Mode)				
2	1/8 Off-Road	Applicable for 1/8 Off-Road / Truck Racing				
3	1/8 On-Road	Applicable 1/8 On-Road Racing				
4	1/8 GT	Applicable 1/8 GT Racing				
5	1/8 Sport	Applicable for 1/8 Sport/Entertainment				
Default Settings of Different Preset Modes:						

Туре		Item	Zero Timing	1/8 Off-Road	1/8 On-Road	1/8 GT	1/8 Sport
General Setting	1A	Running Mode	For/Brake	For/Brake	For/Brake	For/Brake	For/Rev/Brake
	1B	Reverse Force	25%	25%	25%	25%	25%
	1C	LiPo Cells	Auto Calculation				
	1D	Cutoff Voltage	Auto	Auto	Auto	Auto	Auto
	1E	ESC Thermal Protection	Enabled	Enabled	Enabled	Enabled	Enabled
	1F	Motor Thermal Protection	Enabled	Enabled	Enabled	Enabled	Enabled
	1G	BEC Voltage	6.0V	6.0V	6.0V	6.0V	6.0V
	1H	Sensor Mode	Full Sensored				
	11	Motor Rotation	CCW	CCW	CCW	CCW	CCW
	1J	Phase-AC Swap	Disabled	Disabled	Disabled	Disabled	Disabled
Throttle Control	2A	Throttle Rate Control	30	15	25	20	20
	2B	Throttle Curve	Linear	Linear	Linear	Linear	Linear
	2C	Neutral Range	8%	8%	8%	8%	8%
	2D	Initial Throttle Force	2%	1%	3%	2%	2%
	2E	Coast	0%	0%	0%	0%	0%
	2F	PWM Drive Frequency	4K	12K	8K	8K	4K
	2G	Softening Value	0°	0°	0°	0°	0°
	2H	Softening Range	0%	0%	0%	0%	0%
Brake Control	ЗA	Drag Brake	0%	0%	5%	5%	0%
	ЗB	Max. Brake Force	100%	75%	60%	75%	100%
	ЗC	Initial Brake Force	=Drag Brake				
ke (	3D	Brake Rate Control	20	15	20	15	20
Bra	ЗE	Brake Curve	Linear	Linear	Linear	Linear	Linear
	ЗF	Brake Frequency	2К	4K	2К	2К	2К
Timing	4A	Boost Timing	0°	0°	0°	0°	0°
	5A	Turbo Timing	0°	15°	10°	0°	0°
	5B	Turbo Delay	Instant	0.1	0.15	0.1	0.1
	5C	Turbo Increase Rate (deg/0.1sec)	12	12	15	12	12
	5D	Turbo Decrease Rate (deg/0.1sec)	18	18	18	18	18

### **5** Programming:

Here is the method of setting parameters of ESC Note! This ESC has a separate programming port. Please don't connect the throttle control cable to the setting card, otherwise the setting card cannot work. 1) LCD programming box set the parameters: (Please refer to the instructions of LCD programming box for detailes)

This ESC allows LCD programming box to set parameters or LCD programming box connecting to the computer to set parameters (Use HOBBYWING USB LINK software). Before programming, you need to connect your ESC and the LCD program box via a cable with two JR male connectors and turn on the ESC; the boot screen will show up on the LCD. Press any button on the program box to initiate the communication between your ESC and the program box. Seconds later, "CONNECTING ESC" will be displayed, and indicates the foll parameters. You can adjust the setting via "ITEM" & "VALUE" buttons, and press the "OK(R/P)" button to save new settings to your ESC.

Note: Only Multifunction LCD Program Box (G2) can work with this ESC! 2) Use OTA Programmer to set parameters (Please refer to instructions of OTA Programmer for details) This ESC allows OTA Programmer connecting to the computer, that is, plug the programming wire of OTA Programmer to the programming port. Then use mobile phone to install HOBBYWING HW LINK App to set parameters.

3) Data checking: The ESC is able to record the Maximum ESC Temperature, Maximum Motor Temperature, Minimum Battery Voltage and Maximum Motor RPM in operation. It automatically saves the recorded data to the designated area when you turn off the ESC after a run. You can check those data via a multifunction LCD program box whenever necessary. Users need to switch on the ESC after connection between the program box and the ESC has been established. Long Press the "OK(R/P)" button on any "item" page, followed by pressing the "ITEM" button again multiple times. The following 5 item pages will be displayed : Mode  $\rightarrow$  ESC Temperature $\rightarrow$  Motor Temperature  $\rightarrow$  Min Voltage $\rightarrow$  Max RPM.

rogram box or OTA rogrammer

Press the "VALUE+/-" button on any profile page can get you into the next/prev preset mode. Please note that improper operation will get you into other preset mode(s) 6 Factory reset

Here is the method of restore factory reset

1)Restore the default values with a multifunction LCD program box

After connecting the program box to the ESC, continue to press the "ITEM" button on the program box until you see the "RESTORE DEFAULT" item, and press "OK(R/P)" to factory reset your ESC. 2)Restore the default values with a OTA Programmer (Use HW Link mobile phone App) Connect OTA Programmer to the ESC, enter into [Parameters], click "reset" to factory reset your ESC.

## **07** Explanation for LED status

1. During the Start-up Process The RED LED keeps flashing rapidly indicating the ESC doesn't detect any throttle signal or the neutral throttle value stored on your ESC may be different from the current value stored on the transmitter. The GREEN LED flashes "N" times indicating the number of LiPo cells you have connected to the ESC. 2. In Operation

• The throttle trigger is at the neutral: The RED LED turns on solid and the GREEN LED dies out when the throttle trigger is in the throttle neutral zone. The RED LED will blink to meet Blinky( Zero Timing) rules if the total value of Boost Timing and Turbo timing is 0.

 Forward: The RED LED dies out and the GREEN LED blinks when your vehicle runs forward. The GREEN LED turns solid when pulling the throttle trigger to the full (100%) throttle endpoint.
 Brake: The RED LED dies out and the GREEN LED blinks when you vehicle. The GREEN LED turns solid when pushing the throttle trigger to the full blinks when you brake your vehicle. The GREEN LED turns solid when pushing the throttle trigger to the full blinks when you brake your vehicle. "Max. Brake Force" to 100%.

• Backward: The RED LED dies out, the GREEN LED blinks when you reverse your vehicle. The GREEN LED turns solid when pushing the throttle trigger to the full brake endpoint and setting the everse force" to 100%

3. When Some Protection is Activated

- The RED LED flashes a short, single flash and repeats " $\dot{\alpha}, \dot{\alpha}, \dot{\alpha}$ " indicating the low voltage cutoff protection is activated. The REEN LED flashes a short, single flash and repeats " $\dot{\alpha}, \dot{\alpha}, \dot{\alpha}$ " indicating the ESC thermal protection is activated.
- The GREEN LED flashes a short, double flash and repeats "☆☆, ☆☆, ☆☆" indicating the motor thermal protection is activated

 The GREEN LEDS flash a short, single flash and repeats "本☆☆、☆☆☆、☆☆☆☆" indicating that the load of ESC is heavy, the Over-Current protection is activated.
 The GREEN LEDS flash a short, single flash and repeats "☆☆☆☆☆、☆☆☆☆☆" indicating that the temperature of ESC and capacitor is too high, the thermal protection of capacitor is activated.

### Uð Trouble Shooting

The LED isn't on and the motor cannot start. The fan doesn't work.	<ol> <li>The battery voltage was not output to the ESC.</li> <li>The ESC switch was damaged.</li> <li>The positive and negative pole of the ESC is connected reversely.</li> </ol>	<ol> <li>Check whether there is poor welding of power input gate and reweld it.</li> <li>Replace the switch.</li> <li>Reconnect as per right poles.</li> </ol>
The motor cannot start and emit Bi-Bi-, Bi-Bi-, with the green LED flashing (the interval between the Bi-Bi- and Bi-Bi- is 1 seconds)	The battery voltage is not within the normal range.	Check the battery voltage.
Power on and inspect LiPo(Green LED flashes N times) Red LED flashes rapidly. The motor does not rotate.	<ol> <li>The ESC does not detect the throttle signal.</li> <li>The neutral point of the ESC does not match with the transmitter.</li> </ol>	<ol> <li>Check whether the throttle wire and the channel is plugged correctly, and whether the transmitter is turned on.</li> <li>Move the throttle trigger to the neutral point and recalibrate the throttle range.</li> </ol>
The vehicle ran backward when you pulled the throttle trigger towards you.	The rotation direction of this car frame is different from mainstream	Set the rotation direction of the motor to "CW" direction.
The motor suddenly stopped or significantly reduced the output in operation.	<ol> <li>The receiver was influenced.</li> <li>The ESC entered the LVC protection.</li> <li>The ESC entered the thermal shutdown protection.</li> </ol>	<ol> <li>Check all devices and try to find out all possible causes, and check the transmitter's battery voltage.</li> <li>The RED LED keeps flashing indicating the LVC protection is activated, please replace your pack.</li> <li>The GREEN LED keeps flashing indicating the thermal protection is activated, please let your ESC cool down before using it again.</li> </ol>
The motor stuttered but couldn't start.	<ol> <li>Some soldering between the motor and the ESC was not good.</li> <li>The ESC was damaged (some MOSFETS were burnt).</li> </ol>	<ol> <li>Check all welding points and reweld if necessary.</li> <li>Contact the dealer for repair.</li> </ol>
The vehicle could run forward (and brake), but could not reverse.	<ol> <li>The throttle neutral position on your transmitter was actually in the braking zone.</li> <li>Set the "Running Mode" improperly.</li> <li>The ESC was damaged.</li> </ol>	<ol> <li>Recalibrate the throttle neutral position. No LED on the ESC will come on when the throttle trigger is at the neutral position.</li> <li>Set the "Running Mode" to "Fwd/Rev with Brk ".</li> <li>Contact the distributor for repair or other customer service.</li> </ol>
Connect LCD parameter setting box, display "CONNECTING ESC" all the time.	1.The programming port of ESC is used incorrectly. 2.LCD programming box is old version.	<ol> <li>Connect the LCD setting box with the correct interface</li> <li>Connect with LCD G2 programming box</li> </ol>
Press SET key to set neutral point when setting the throttle range, the green LED does not flash and without "Bi" sound. Or cannot set the end point of forward and backward after setting the neutral point.	<ol> <li>The throttle wire of ESC is not plugged into the right channel of receiver.</li> <li>The throttle wire is connected reversely.</li> </ol>	<ol> <li>Plug the throttle wire into the TH channel marked by the receiver.</li> <li>Insert according to the sequence marked by the receiver.</li> </ol>