

We reserve the rights to update the design and performance of the product

Thank you for purchasing this product! Please read the following statement carefully before use and, once used, it is considered to be an acceptance of all the contents. Please strictly observe and adhere to the manual installation with

this product. Unauthorized modification may result in personal injury and

This propulsion system is an industrial-grade component for unmanned aircraft. If you have more specialized application requirements, please contact us

HW-SMC809DUL00

01 Introduction


The CM-H13-Coaxial brushless power system is an industrial version power system that adopts a single-axis load of 45kg. The maximum pulling force of a single axis is 113kg and is suitable for a 60mm carbon fiber tube arm with an overall waterproof level protection rated at IP45. The efficient heat dissipation provides a one-stop power solution for small professional aerial photography, police, security, surveying and mapping, emergency and other multi-field rotor drone applications. FOC ESC adopts CAN communication, dual redundant design of digital throttle and PWM throttle, with power-on self-test, fault storage, over-current protection, stall protection and other protection functions

02 Precautions

- Please stay away from crowds, high-voltage lines, obstacles, etc. when using, and be sure to follow safety regulations when using.
- The power system contains FOC drive ESC, which needs to strictly match the motor parameters. The program is unique. It is only suitable for one combination of propellers and is not compatible with multiple combinations at the same time. If you need to change it, please contact the manufacturer. Unreasonable combinations will trigger ESC protection and make it unusable.
- The ESC is equipped with CAN/ RS485 function. When using the CAN function, the ESC ID and the throttle channel of the same aircraft cannot be the same, otherwise the multiple ESCs will be recognized as the same.
- Do not bring propellers for ground testing to avoid unnecessary danger.
- Be sure to connect all parts carefully. If the connection is poor, you may not be able to control the aircraft normally, or other unpredictable situations such as equipment
- If you need to weld the input and output wire plugs of the ESC, please ensure that the welding is reliable and use welding equipment with sufficient power. • Do not use it when the external ambient temperature exceeds 65°C. The high temperature will destroy the ESC and may cause damage to the motor and cause the
- The steering of the power system has been set at the factory. Please observe the motor steering mark. It is not supported to change the sequence of the motor phase


03 Power system composition

wires due to the packaging and sealing process.

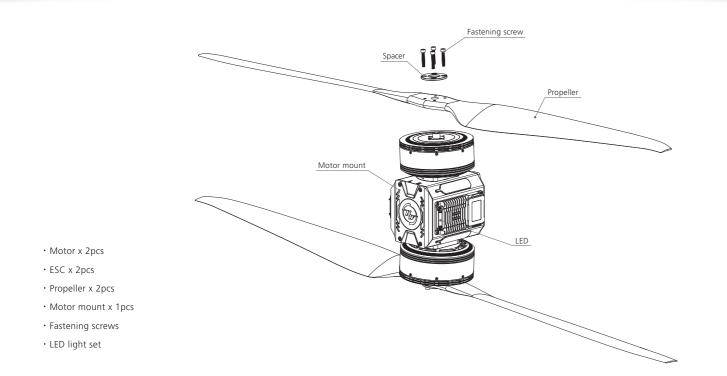

04 Power system installation

- The entire power system has been assembled at the factory and can be taken out directly from the package to install on the UAV frame according to the rotation of the
- The red, gray two-color cable is the data output and upgrade signal line (the system can be upgraded for the ESC), the red wire is CAN-High (hereinafter referred to as CH); the gray wire is CAN-Low (hereinafter referred to as CL); The black and white cables are the ESC throttle signal wires, the black wire is the ground wire, and the white wire is the throttle signal wire.
- The data signal line outputs throttle, motor speed, bus current, bus voltage, capacitor temperature, MOSFET tube temperature and other data in real time. • The ESC throttle is solidified at 1100~1940µs.

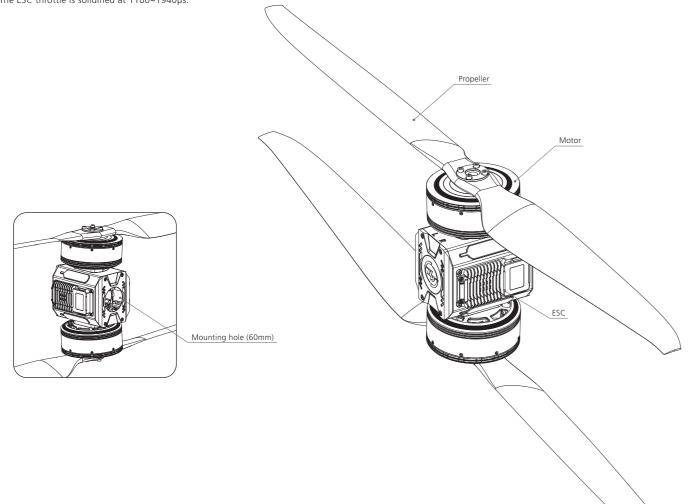

05 Specifications

Recommended uniaxial load: 45kg Max.Torque: 113kg Lithium compatible: 24S (Max130V) Ambient temperature: -40°C-65°C Applicable carbon tube: 60mm (diameter) Total weight (excluding propellers):8010±100g Protection level: IP35

Support throttle frequency: 50-500Hz

Continuous current: 60A (Non-airtight ambient temperature ≤ 60 °C) Lithium compatible: 30-130V Instantaneous current: 150A (3 seconds - good heat dissipation)


Throttle solidified: 1100-1940µs


Motor Model: 13825 Outer diameter: 147.9mm KV rating: 37KV

Propelle

Dimension: MP57*20" Weight (straight propeller): 480±15g

06 Power system parameters

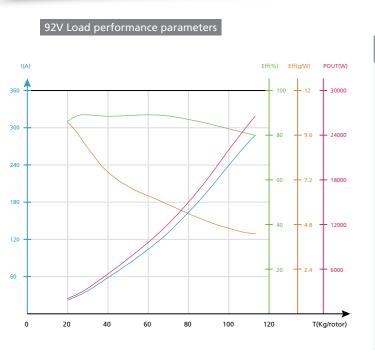

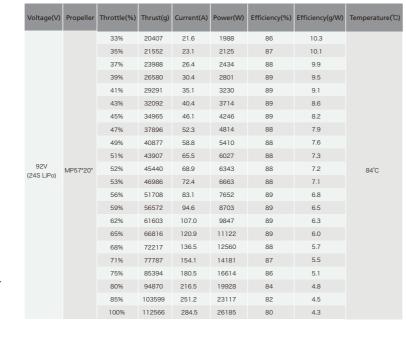

33% 21109 35% 22328 37% 23.9 27.7 27613 43% 45% 36386 42.2 8.0 47% 47.7 7.7 6101 50% 44205 51% 45815 59.5 6428 7.1 52% 47440 62.6 6760 7.0 57% 60% 61013 89.8 9702 6.3 65% 70049 110.6 11945 5.9 71% 75% 89035 163.7 17687 80% 98321 193.7

The above data are measured by Hobbywing Lab at the ambient temperature of 25°C and sea level by changing the throttle input adjustment. The motor temperature is measured by running the throttle at the rated point for 10 minutes, for reference only.

07 ESC protection function

This ESC is specially designed for industrial drones, without low-voltage protection and over-heat protection.

- When the ESC detects that the motor is locked, the ESC will completely turn off the output and repeatedly try to restart the motor. Please land the aircraft as soon as possible if the motor is unable to be restarted. The power output can only be resumed after the power is turned off and restarted, and the fault is eliminated.
- When the instantaneous phase current abnormality reaches 360A, the ESC will turn off the output and keep trying to restart the motor. If the motor does not restart, it
- will return to normal after power on again.

A fault message will be sent out through the data interface when the MOS is higher than 110°C or capacitor temperature is higher than 100°C. Please land the aircraft in time or reduce the throttle output when the ESC reports an over-heat fault, if the temperature continues to rise, electronic components may be damaged.

This ESC has no low-voltage protection. Some electronic components of the ESC will work abnormally when the voltage falls below 30V. Please land the aircraft in time. • Throttle signal loss protection

When the ESC detects that the throttle signal is lost, the output will be turned off immediately to avoid greater losses caused by the continued high-speed rotation of the propeller. After the signal is restored, the ESC will resume normal operation immediately.

08 ID setting

If there is no requirement, the default factory ID of the ESC is 1, the throttle channel is 1, and the bus speed is 500KHz.

This function requires the additional purchase of DataLink data box


Before using this function, ensure that the computer system has installed Micosoft Visual C++ 2013 software in advance, otherwise it cannot operate normally. 1) Connection

ESC---->DataLink data box "red gray"----> "CH1 CL1";

Connect the data box to the computer via USB.

When changing the ID, please remove the propeller to avoid danger.

For the same aircraft, different ESC IDs and throttles cannot be the same to avoid same ID recognizing as one ESC when using CAN function. 2) Operating diagram

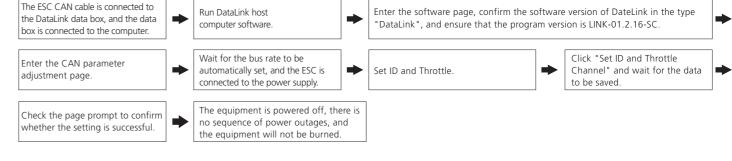

09 Fault data read

The ESC has its own fault storage function to store the times upon powering-on, flight time, and fault times information. It is convenient for flight fault analysis. This function needs to use DataLink data box, serial port assistant, and DataLink host computer software

Note: DataLink software can be obtained from Hobbywing official website, dealers, Hobbywing sales, and Hobbywing after-sales


DataLink data box firmware version requirements: LINK-01.2.16-SC or later; serial port assistant requirements: USB to TTL protocol; DataLink host computer software requirements: fault storage version. It can be obtained on the official website, WeChat official account or after-sales service

The DataLink box has three power supply methods (+5V), USB data cable, serial port assistant, and external power supply cable. You can choose one of the power supply methods, and you don't need to repeat the power supply.

Note: For detailed steps, please refer to the DataLink user manual.

Serial port assistant ----> DataLink data box "GND 5V TX RX" ----> "— + RX2 TX2" (please click here for the corresponding line sequence); ESC---->DataLink data box "red gray"----> "CH1 CL1", multiple ESCs can be used in parallel.

2) Software operation

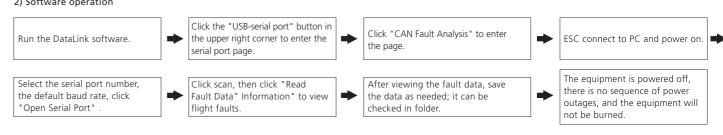

10 Firmware upgrade

Firmware upgrade is divided into two ways: computer online upgrade and flight controller remote upgrade. It supports online upgrade of multiple ESCs at the same time, and the upgrade port is CAN-ESC (Fast).

The upgrade of the flight control needs to cooperate with the flight control(not explained here).

This function needs to use DataLink data box, special DataLink software for upgrade package, and USB data cable.


DataLink data box version requirements, LINK-01.2.16-SC or later; DataLink software can be obtained from Hobbywing official website, distributors, Hobbywing sales, and

Note: Please ensure that the computer system has installed Microsoft Visual C++ 2013 software before using this function, otherwise it cannot be used. An upgrade package usually only contains one program for one type of ESC. For other ESCs, please re-obtain the upgrade package for the corresponding ESC model.

Connect the computer and the DataLink data box with the USB data cable; ESC---->DataLink data box "red gray"---->"CH1 CL1".

2) Firmware acquisition

It can be obtained at the place of purchase, Hobbywing official website, dealers, Hobbywing sales and Hobbywing after-sales offices. Note: It can only be upgraded from the existing program, and software and hardware cannot be upgraded together.

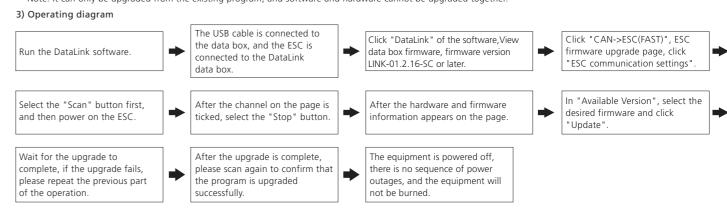

Common Faults and Prompt Sound Description

Warning tone description

	Alarm tone	Possible causes	Solutions		
Motor fails to start after power on	"Beep beep beep" rapid monophonic	Throttle not reset to zero	Push the throttle to the lowest point or recalibrate the throttle point		
Motor fails to start after power on	"Beep, beep, beep," (1 second for each interval)	Receiver throttle channel has no throttle signal output	Check whether the transmitter and receiver operates normally Check whether the throttle control channel wiring is normal		
The power-on voltage is lower than 30V	"Beep, beep" (interval 1 second)	Battery voltage is too low	Replace with a suitable fully charged battery		
The power-on voltage is higher than 130V	"Beep, beep" (interval 1 second)	Battery voltage too high	Replace with a suitable fully charged battery		
The motor stops or restarts		The motor is not compatible with the ESC	Replace the motor, or replace the propeller		
There is no sound during the self-test of the motor, but the motor can rotate	There is no prompt sound during self-test, and the motor rotates	Driver exception	Replace ESC Return to factory for repair		
The motor cannot start normally, accompanied by "click" click" jitter	There is no prompt sound during the self-test, and the motor is unable to rotate	Motor phase loss	Check phase connection Check motor If there is no problem with the motor and connection, return the ESC to the factory for repair		

12 The blinking of the light

Condition	Hormai	ruii oi tiirottie	Over voitage	LOW VOILage	Over current	Tillottie lost	the 0% position	WOS Overneat	heat	WOTOL BIOCK	
Number of blinking of the light	The light is always on	Continuous short blinking	1 short	2 short	3 short	1 long	1 long and 1short	1 long and 2 short	1 long and 3 short	1 long and 4 short	
Others	-	_	_	_	_	-	_	_	-		
Condition The		The input the	The input throttle signal is not at the 0% position			Shorted circuit of signal line			Open circuit of motor		
Sound & blinking		Continus short loudly beep & LED continuous			s Co	Continuous short with blinking &			Continus short blinking without beep		

Capacitor over