


安装示意图 Installation Drawing


碳管加工示意 Carbon Tube Pre-processing

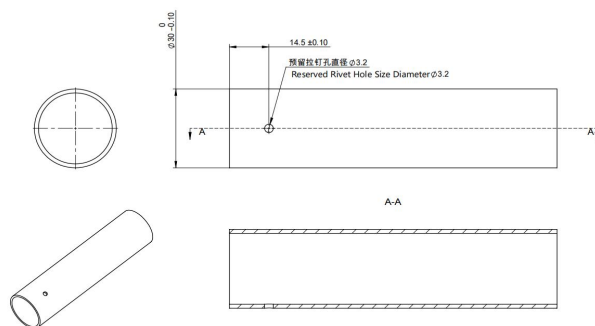

动力套装配示意 Assemble Steps


1. 拧松管夹座上锁碳管的4颗M3螺丝；

1. First, loosen the 4*M3 screws on the tube clip holder.

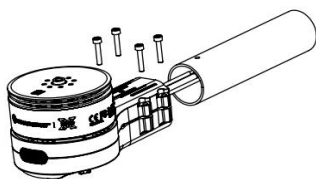

2. 将动力套线束穿过碳管，碳管插入管夹座并推到底；


2. Pass the propulsion system cable bundle through the carbon tube, insert the carbon tube into the tube clip holder, and push it to the bottom.

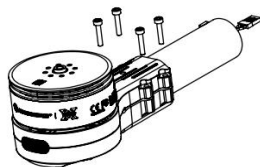

3. 拧紧管夹座上锁碳管的4颗M3螺丝；


(推荐扭力值 1.2N*M)

3. Tighten the 4*M3 screws on the tube clip holder for fixing the carbon tube (The tightening torque should be 1.2N·m).

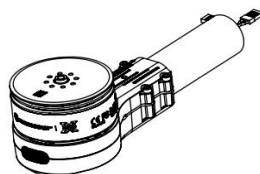

4. 如有需要，可在碳管上打孔，并在管夹座上方预留孔位增加拉钉，用于固定动力套；

3. If necessary, holes can be drilled on the carbon tube, and the hole reserved on the upper side of the tube clip holder is for adding a rivet to secure the propulsion system.

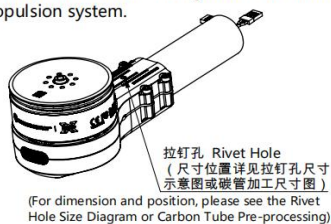

拉钉孔尺寸示意
Rivet Hole Size Diagram

