



安装示意图 Installation Drawing

动力套装配示意 Assemble Steps

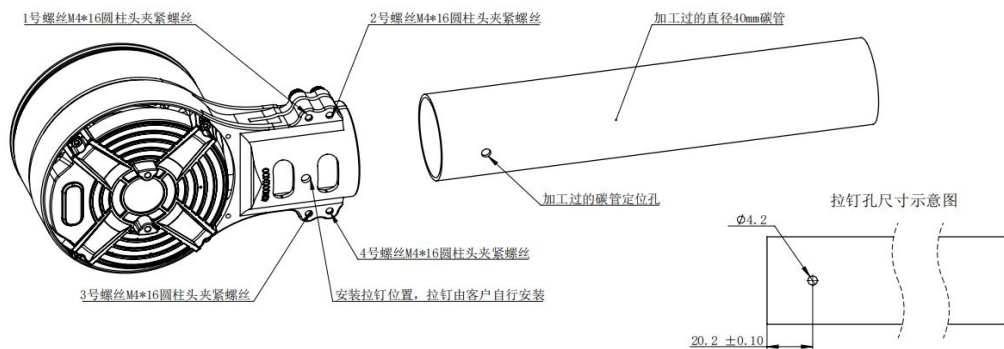

安装步骤:

- 1、先拧松管夹座上锁碳管1~4号的4颗螺钉，将动力套线束穿过碳管，碳管插入管夹座并推至底，确保动力套装入后处于水平状态；
- 2、先旋1号夹紧螺丝，再旋3号夹紧螺丝；再旋2号夹紧螺丝，再旋4号夹紧螺丝。以此类推，锁到预紧状态切勿一次性锁紧；
- 3、1~4号夹紧螺丝锁紧扭力应在 $2.5 \pm 10\% \text{ N} \cdot \text{m}$ ；
- 4、如有需要，可在碳管上打孔，并在管夹座上/下方预留孔位增加拉钉，用于固定动力套。

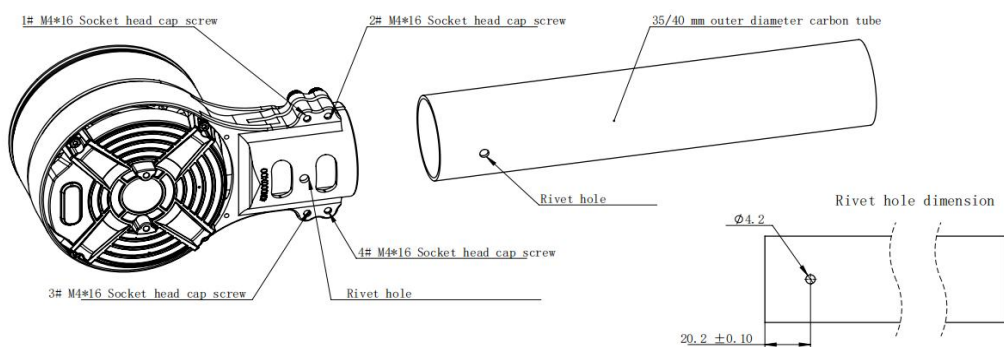

Installation steps:

1. First, loosen the four screws (#1-#4) on the tube clip holder for fixing the carbon tubes, then pass the propulsion system cable bundle through the carbon tubes, insert the carbon tubes into the tube clip holder, and push them to the bottom. Make sure that the propulsion system is horizontally positioned after installation.
2. Tighten #1 screw first, then #3 screw, followed by #2 screw, and finally #4 screw. Follow this order, and lock the screws to the pre-tightening state. Do not tighten all at once.
3. The tightening torque for #1-#4 should be $2.5 \pm 10\% \text{ N} \cdot \text{m}$.
4. If necessary, holes can be drilled on the carbon tube, and holes reserved above or below the tube clip holder are for adding rivets to secure the propulsion system.